

# 附表

蘭潭水庫出水工蝶閥開度流量關係表 單位：cms

水庫水位 (EL.m)	控制閘門開度(m)									
	1.0	0.9	0.8	0.7	0.6	0.5	0.4	0.3	0.2	0.1
73.8	12.78	12.11	10.96	9.55	8.01	6.39	4.77	3.22	1.82	0.67
73.9	12.83	12.16	11	9.59	8.04	6.41	4.79	3.24	1.83	0.67
74	12.87	12.2	11.04	9.63	8.06	6.44	4.81	3.25	1.83	0.67
74.1	12.92	12.25	11.08	9.66	8.09	6.46	4.83	3.26	1.84	0.67
74.2	12.97	12.29	11.12	9.7	8.12	6.48	4.84	3.27	1.85	0.67
74.3	13.01	12.34	11.16	9.73	8.15	6.51	4.86	3.28	1.85	0.68
74.4	13.06	12.38	11.2	9.77	8.18	6.53	4.88	3.3	1.86	0.68
74.5	13.11	12.43	11.24	9.8	8.21	6.55	4.9	3.31	1.87	0.68
74.6	13.16	12.47	11.28	9.84	8.24	6.58	4.91	3.32	1.87	0.68
74.7	13.2	12.52	11.32	9.87	8.27	6.6	4.93	3.33	1.88	0.69
74.8	13.25	12.56	11.36	9.91	8.3	6.63	4.95	3.34	1.89	0.69
74.9	13.29	12.6	11.4	9.94	8.33	6.64	4.96	3.35	1.89	0.69
75	13.34	12.64	11.44	9.97	8.36	6.67	4.98	3.37	1.9	0.69
75.1	13.38	12.69	11.48	10.01	8.38	6.69	5	3.38	1.91	0.7
75.2	13.43	12.73	11.52	10.04	8.41	6.72	5.02	3.39	1.91	0.7
75.3	13.48	12.78	11.56	10.08	8.44	6.74	5.03	3.4	1.92	0.7
75.38	13.51	12.81	11.59	10.1	8.46	6.75	5.05	3.41	1.92	0.7
75.4	13.52	12.81	11.59	10.11	8.47	6.76	5.05	3.41	1.92	0.7